

CONTENTS

	<u>Page</u>
1. INTRODUCTION	
1.1 Purpose -----	1
1.2 Features -----	1
1.3 Operation Conditions -----	1
1.4 Analogue Specification -----	1
1.5 Existing Parts to Be Used -----	1
1.6 Display and Indicator	
1.6.1 Display Specifications -----	1
1.6.2 Indicators -----	2
1.7 Keypad	
1.7.1 Keypad Layout -----	2
1.7.2 Key Function -----	2
2. MAINTENANCE MODE	
2.1 Specification Changeover	
2.1.1 Specification List (Version 1.10) -----	3
2.1.2 Specification List (Version 1.21) -----	4
2.2 Span Adjustment	
2.2.1 Calibration (Version 1.10) -----	5
2.2.2 Calibration (Version 1.21) -----	5
2.3 Internal Count -----	6
2.4 Error Message List -----	6
2.5. Basic Operation	
2.5.1 Power ON/OFF -----	7
2.5.2 Automatic Shut Off Timer Setting -----	7
2.5.3 Re-zero Operation -----	8
2.5.4 Tare Subtraction -----	8
2.6 Key Summary -----	8
2.7 Position of SPAN Switch	
2.7.1 Main Board -----	9
2.7.2 A/D Board -----	9
2.7.3 RFI Type -----	10
2.8 Hardware Description	
2.8.1 Microcomputer -----	11
2.8.2 Pin Assignment -----	11

3. CIRCUIT DIAGRAM

- 3.1. Main Board-AD
- 3.2. Main Board-POWER
- 3.3. Main Board-CPU